



REAL SMART HOME

REAL SMART HOME GmbH

APPMODULE

Panasonic Connect Pro

Smarthome App Documentation

Version: 1.1.4

Type: Application

Article No.: BAB-060

Documentation version II
Actual state 09/2020
Date: 8. October 2020

EN



REAL SMART HOME GmbH

Hörder Burgstraße 18
D-44263 Dortmund

Email: [info\[at\]realsmarthome.de](mailto:info@realsmarthome.de)

Tel.: +49 (0) 231-586974-00
Fax.: +49 (0) 231-586974-15
www.realsmarthome.de

TABLE OF CONTENTS

1	Introduction.....	4
	Important information on the operating instructions	4
2	Panasonic Connect Pro – Functional overview.....	5
3	The innovative, modular Smarthome App-concept for the building automation.....	6
3.1	Information about the APPMODULE.....	6
4	Smarthome App installation / update.....	7
5	Smarthome App settings	8
5.1	Panasonic Connect	8
5.2	Device selection	8
5.3	Basic functions	9
5.4	Volume Control.....	9
5.5	TV modes	10
5.6	TV inputs	10
5.7	Media Control	11
5.8	Display content.....	11
5.9	Customizations for SMART SCREENS	15
6	Appendix	17
6.1	COMPATIBLE PANASONIC TVS.....	17
6.2	Datapoint Types.....	18

1 INTRODUCTION

Thank you for your trust, and the purchase of the **Panasonic Connect Pro** -Smarthome App for the BAB **APP**MODULE. With **Panasonic Connect Pro** -Smarthome App you get Integrate Panasonic TVs into your Smart Home based on KNX, EnOcean and IP. The seamless connection with »Panasonic Connect Pro« enables control with all Smart Home components and building visualisations.

This documentation will help you get started with the app and aims to improve your setup experience.

REAL SMART HOME GmbH

IMPORTANT INFORMATION ON THE OPERATING INSTRUCTIONS

We reserve the right continually improve the product. This entails the possibility that parts of this documentation might be out-of-date. You will find the latest information at:

www.bab-appmarket.de

This app is an independent product, with no legal ties to Panasonic Corporation. Neither **BAB APP MARKET** GmbH nor the developer of this app take any claim in the trademarks owned by Panasonic Corporation.

2 PANASONIC CONNECT PRO – FUNCTIONAL OVERVIEW

The seamless KNX connection with «**Panasonic Connect Pro**» enables the control of a maximum of 2 TV sets with all Smart Home components such as wall switches and building visualizations. Integrate your Panasonic TV into Smarthome scenes – at the push of a button the blinds are lowered, the ambient lighting is activated and the TV is switched on with the desired source selection and volume. In addition to the basic functions such as switching on and off, volume control or channel selection, you can display individual text messages on your TV using KNX commands. For example when the doorbell rings at the front door or a window is opened. With the Panasonic TV remote control you can now even control KNX components or scenes. Your TV doesn't get smarter!


Highlights:

- Integrate up to 2 TVs
- Wake-On-Lan support
- All basic functions can be controlled via KNX
- Individual, animated text messages on the TV
- KNX control via TV remote control (HbbTV keys)
- Compatibility with TV sets from 2020:
 - TV series HZW2004, HZW1004, HZW984, HXW944, HXW904, HXW804, HZ*150*, HX*97*, HX*88*, HZC2004, HZC1505, HZC1004, HZC984
- Compatibility with TV sets from 2019:
 - TV series GZW2004, GZW1004, GZW954, GXW945, GXW904, GXW804, GZ*150*, GX*93*, GX*88*, GZC2004, GZC1505, GZC1004, GZC954, FSW504, FSW404, FS*60*
- Also works with older models, for example:
 - 2015 Series larger CS600
 - 2016 Series larger DS600
 - 2017 Series equal to or greater ES400
 - 2018 Series equal to or greater FS400

3 THE INNOVATIVE, MODULAR SMARTHOME APP-CONCEPT FOR THE BUILDING AUTOMATION

The innovative, modular Smarthome App concept for building automation. The **APPMODULE** brings the innovative, modular Smarthome App concept into building automation. You can mix and match any of the diverse applications that are available to integrate third-party solutions. With these Smarthome Apps from the dedicated **BAB APPMARKET**, the **APPMODULE** becomes a tailor-made integration unit for your building automation.

HOW IT WORKS

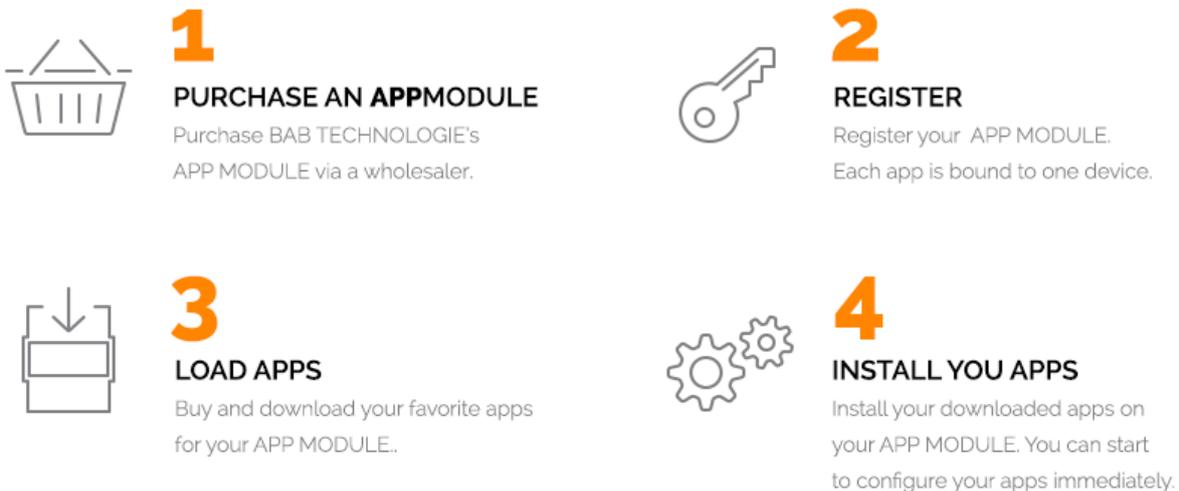

Manufacturer of the **APPMODULE** [BAB TECHNOLOGIE GmbH](http://www.bab-tec.de)

Distribution of all Smarthome Apps for the **APPMODULE** [BAB APPMARKET GmbH](http://www.bab-appmarket.de)

Smarthome App developer [REAL SMART HOME GmbH](http://www.real-smart-home.de)

3.1 INFORMATION ABOUT THE APPMODULE

Please refer to the separate product documentation of the **APPMODULE** for a detailed product description and setup instructions.

http://www.bab-tec.de/index.php/download_de.html

Product variants:

The **APPMODULE** is available in three variants:

- **APPMODULE KNX/TP** – for stand-alone use on KNX/TP Bus
- **APPMODULE EnOcean** – for stand-alone use in the EnOcean wireless network
- **APPMODULE IP** – for use in an IP-based KNX installation (KNXnet/IP) or as extension for an EIBPORT

4 SMARTHOME APP INSTALLATION / UPDATE

Please proceed as follows to install a Smarthome App.

1. Open the **APPMODULE** web page: Enter <IP Address of **APPMODULE** > into your browser's address bar and press Enter. The **APPMODULE** web interface will appear.
2. Log in with your user credentials. Please refer to the **APPMODULE** documentation for login details.
3. Click on the menu entry "App Manager"
4. You are now on the page where already installed Smarthome Apps are listed. The list will be empty if no Smarthome Apps have been installed. Click "Install App" in order to install a new Smarthome App.
5. Now click on "Select App"; a file selector window will appear. Choose the Smarthome App » **Panasonic Connect Pro** « and click "OK".

The Smarthome App » **Panasonic Connect Pro** « must first be downloaded from the **BAB APPMARKET** (www.bab-appmarket.de).

After the message "Installation successful" appears, click "OK". You are ready to configure the Smarthome App.

To update a Smarthome App manually you have to proceed as follows

1. To update an already installed Smarthome App, click on the App icon in the "App Manager".
2. The detail view of the Smarthome App appears. Click on "Update App" to select the Smarthome App package and start the update. The update version must be downloaded from the **BAB APPMARKET**.

After the message "Installation successful" appears, click "OK". The Smarthome App has been updated. Your instance configurations will remain unchanged.

The Smarthome App can also be updated directly in the web interface. Without having to download the Smarthome App from the **BABAPPMARKET** first.

In the "App Manager" available Smarthome App updates are reported

Information

To configure the Smarthome App please use Google Chrome.

5 SMARTHOME APP SETTINGS

Integrate Panasonic TVs into your Smart Home based on KNX, EnOcean and IP. The seamless connection with »Panasonic Connect« enables control with all Smart Home components and building visualizations.

5.1 PANASONIC CONNECT

As soon as the Smarthome App is installed, you can create so called "Instance". An Instance is one of several objects of the same class.

In order to create an instance, click on the symbol "Create Instance".

Instance Name:

Choose a name for this new instance.

Comment:

Insert a description what this instance does.

5.2 DEVICE SELECTION

IP Address of the TV:

List of existing devices.

MAC Address:

MAC-Address of the selected TV.

Please turn your TV on for searching

Please switch on your TV.

Device Connection Status (EIS 1):

Insert the group address for the connection status to the TV controlled by this instance. (0: no connection to the device, 1: connection established).

5.3 BASIC FUNCTIONS

Standby On/Off (EIS 1):

Enter the group address for activating and deactivating the standby function. If '1' is transmitted, switch standby off (TV on); if '0' is transmitted, switch standby on (TV off).

Query Power Status (EIS 14 0-2):

Enter the group address for querying the power status. With the value „0“ the TV is switched off, with value „1“ it is switched on and with the value „2“ the TV is in standby.

Channel up/down (EIS 1):

Enter the group address to jump one channel forward or backward on your device. With '1' the device jumps forward, with '0' the device jumps backward

Set channel (EIS 10 1-9999):

Enter the group address for channel setting. You can use values between 0-9999.

5.4 VOLUME CONTROL

With these addresses you can regulate the volume.

Mute toggle (EIS 1):

Enter the group address for toggle the mute status of your device. You can send values between 0-1.

Mute Status (EIS 1):

Enter the group address to query the mute status of your device. If the value is 1, the mute is switched on. At value 0 the mute is switched off.

Volume up/down (EIS 1):

Enter the group address for increasing or decreasing the volume of your device. With '1' you increase the volume, with '0' you decrease the volume.

Set volume (EIS 6 0%...100%):

Enter the group address for setting the volume of your device. You can use values between 0-100%.

Current volume status (EIS 6 0%...100%):

Enter the group address to query the volume value of your device.

5.5 TV MODES

With these addresses you can switch between the TV modes

LastView mode (EIS 1):

Enter the group address to switch on the LastView mode. A sending value is not necessary.

Types of reception (EIS 14 1-6):

Choose between different reception types. You can use values between 1-6.

- 1 = Analogue
- 2 = DVB-T
- 3 = DVB-S
- 4 = Freesat
- 5 = DVB-C
- 6 = SAT-IP

Please turn your TV on for searching

Please switch on your TV.

5.6 TV INPUTS

With this address you can switch between the TV inputs.

Inputs AV and Component (EIS 14 1-3):

Enter the group address to choose between the AV and component inputs. You can use values between 1-3.

- 1 = AV1
- 2 = AV2
- 3 = Component1

Inputs HDMI and Display Port (EIS 14 1-5):

Enter the group address to choose between the HDMI and DisplayPort inputs. You can use values between 1-5.

- 1 = HMDI1
- 2 = HMDI2
- 3 = HDMI3
- 4 = HDMI4
- 5 = DisplayPort1

5.7 MEDIA CONTROL

With these addresses you can control media

Media play/pause (EIS 1):

Enter the group address to start or pause your media. With '1' the device plays your media, with '0' the device pause your media.

Media stop (EIS 1):

Enter the group address to stop your media. A sending value is not necessary.

Media forward/rewind (EIS 1):

Enter the group address for fast forwarding and rewinding your media. With '1' your media fast forward, with '0' your media rewinds.

Media skip forwards/backwards (EIS 1):

Enter the group address to skip your media forward or backward. With '1' your media skip forwards, with '0' your media skip backwards.

5.8 DISPLAY CONTENT

Global TV input for messages

Some TV inputs (e.g. HDMI) do not support to display for messages. With this option you can choose which input should be used for your message. Please note that the input type must be available on your device.

- DVB-T
- DVB-S
- Freesat
- DVB-C

Group address text display (EIS 14 1-25)

Enter the group address for displaying a text. You can use values between 1 and 25.

Create text display

This feature allows you to assign integer numbers up to 25 text displays. Send this number to the group address of the text display to show the text on your TV.

Id

A specific identity for your text display.

Name

The name of the text display.

Assigned integer (1-25)

The text is displayed on the TV when this number is sent as the content of telegram.

Display Text

The text that should be displayed on your TV.

Background color

You can change the background color of your text display.
(Black, White, Gray, Green, Blue, Yellow, Red, animated background).

Text color

You can change the text color of your text.
(Black, White, Grey, Green, Blue, Yellow, Red)

Text size

For the text size you can choose Big, Small and Normal.

Change TV input automatically

Some TV inputs (e.g. HDMI) do not support the display of messages. If this option is selected, the TV automatically switches to the selected global TV input. Please note that the input type must be available on your device.

Hide automatically (seconds)

Enter the seconds when your text should automatically be hidden. If you enter a 0, your text will not disappear automatically.

Button settings

Defined buttons and the associated actions for your message.

Red Button – Name

Enter name for the red button. This button will be displayed on the TV.

Red Button – Group address (EIS)

Enter the group address that you want to trigger using the red button on your remote control.

Red Button – Group address value (0-1)

Enter a value (0 or 1) to be sent to the group address.

Green Button – Name

Enter name for the green button. This button will be displayed on the TV.

Green Button – Group address (EIS)

Enter the group address that you want to trigger using the green button on your remote control.

Green Button – Group address value (0-1)

Enter a value (0 or 1) to be sent to the group address.

Yellow Button – Name

Enter name for the yellow button. This button will be displayed on the TV.

Yellow Button – Group address (EIS)

Enter the group address that you want to trigger using the yellow button on your remote control.

Yellow Button – Group address value (0-1)

Enter a value (0 or 1) to be sent to the group address.

Blue Button – Name

Enter name for the blue button. This button will be displayed on the TV.

Blue Button – Group address (EIS)

Enter the group address that you want to trigger using the blue button on your remote control.

Blue Button – Group address value (0-1)

Enter a value (0 or 1) to be sent to the group address.

Group address video display (EIS 14 1-25)

Enter the group address for displaying a video. You can use values between 1-25.

Create Video Display

This feature allows you to assign integer numbers up to 25 video displays. Send this number to the group address for of the video display to show the video on your TV.

Name

The name of the video display.

Assigned integer (1-25)

The video is displayed on the TV when this number is send as the content of the telegram.

Video URL

The URL of the video to be displayed on your TV. Please note that RTSP streams are not supported.

Change TV input automatically

Some TV inputs (e.g. HDMI) do not support the display of video. If this option is selected, the TV automatically switches to the selected global TV input. Please note that the input type must be available on your device.

- Yes
- No

5.9 CUSTOMIZATIONS FOR SMART SCREENS

Channel List (Favorites)

You can create a list of SMART SCREENS with all your favorite channels, as an alternative or addition to a numerical channel number input. This list provides convenient access to the included channels. Specify the channel names and channel numbers (1-9999).

Channel Name

Set up the name for the channel.

Channel Number (1-9999)

Enter the channel number.

Custom TV Mode list

By default SmartScreen offers a TV mode selection with theoretically possible modes:

- 1 = Analogue
- 2 = DVB-T
- 3 = DVB-S
- 4 = Freesat
- 5 = DVB-C
- 6 = SAT-IP

You can create your own List here, if you want fewer options, or want to change the input names.

Name

Set up the name of the input.

Value (1-6)

Enter a valid value between 1 and 6.

- 1 = Analogue
- 2 = DVB-T
- 3 = DVB-S
- 4 = Freesat
- 5 = DVB-C
- 6 = SAT-IP

Custom AV and Component input list

By default, SMART SCREENS offers an AV and Component input selection with theoretically possible inputs:

- 1 = AV1
- 2 = AV2
- 3 = Component 1

You can create your own list here, if you want fewer options, or want to change the input names.

Name

Set up the name of the input.

Value (1 - 3)

Enter value between 1 and 3:

- 1 = AV1
- 2 = AV2
- 3 = Component 1

Custom HDMI and Display Port input list

By default, SMART SCREENS offers an HDMI and Display Port input selection with theoretically possible inputs:

- 1 = HDMI1
- 2 = HDMI2
- 3 = HDMI3
- 4 = HDMI4
- 5 = DisplayPort1

You can create your own list here, if you want fewer options, or want to change the input names.

Name

Set up the name for the input.

Value (1 – 5)

Enter a valid value between 1 and 5.

- 1 = HDMI1
- 2 = HDMI2
- 3 = HDMI3
- 4 = HDMI4
- 5 = DisplayPort1

6 APPENDIX

6.1 COMPATIBLE PANASONIC TVS

- Compatibility with TV sets from 2020:
 - TV series HZW2004, HZW1004, HZW984, HXW944, HXW904, HXW804, HZ*150*, HX*97*, HX*88*, HZC2004, HZC1505, HZC1004, HZC984
- Compatibility with TV sets from 2019:
 - TV series GZW2004, GZW1004, GZW954, GXW945, GXW904, GXW804, GZ*150*, GX*93*, GX*88*, GZC2004, GZC1505, GZC1004, GZC954, FSW504, FSW404, FS*60*
- Also works with older models, for example:
 - 2015 Series larger CS600
 - 2016 Series larger DS600
 - 2017 Series equal to or greater ES400
 - 2018 Series equal to or greater FS400

6.2 DATAPOINT TYPES

function	EIS type	DPT	typical function	typical values	data	identifier
PriorityPosition	EIS1	DPT 1*	Wind alarm	1=high and inhibit	1 Bit	1-bit
Switch	EIS1	DPT 1*	Light switching	0=Off; 1=On	1 Bit	1-bit
DimControl	EIS2	DPT 3*	Dimming	0=Off; 1=On xxx=relative dimming 0-255=absolute dimming	1Bit 4Bit 8Bit	3-bit controlled
Time	EIS3	DPT 10*	Time	hh:mm:ss	3Byte	Time
Date	EIS4	DPT 11*	Date	dd:mm:yyyy	3Byte	Date
Value	EIS5	DPT 9*	Float Vaue IEEE	[-671088.64 ... 670760.96]	1Byte	2-byte float value
DimValue	EIS6	DPT 5*	Percent	0...100%	1Byte	8-bit unsigned value
DriveBlade Value	EIS6	DPT 5*	Angle value	0...100%; 0...255	1Byte	8-bit unsigned value
DriveShutter Value	EIS6	DPT 5*	Position value	0...100%; 0...255	1Byte	8-bit unsigned value
Position	EIS6	DPT 5*	Control value Heating	0...100%; 0...255	1Byte	8-bit unsigned value
DriveMove	EIS7	DPT 1*	Move shutter	0=up; 1=down	1Bit	1-bit
DriveStep	EIS7	DPT 1*	Adjusting the slat	0=up; 1= down; 0 or 1 during movement=stop	1Bit	1-bit
PriorityCont-rol	EIS8	DPT 2*	Priority	0,1 switch; 3=forced off; 4=forced on	2Bit	1-bit controlled
FloatValue	EIS9	DPT 14*	IEEE	Floating-point value	4Byte	4-byte float value
Counter 16bit	EIS10	DPT 7*	Counter 16 bit	0 ... 65.535	2Byte	2-byte unsigned value
Counter 16bit	EIS10	DPT 8*	Counter 16 bit signed	-32.768 ... 32.767	2Byte	2-byte signed value
Counter 32bit	EIS11	DPT 12*	Counter 32 bit	0 ... 4.294.967.295	4Byte	4-byte unsigned value
Counter 32bit	EIS11	DPT 13*	Counter 32 bit signed	-2.147.483.648 ... +2.147.483.647	4Byte	4-byte signed value
Access Control	EIS12	DPT 15*	Access control	Card number	4Byte	Entrance access
Char	EIS13	DPT 4*	ASCII characters	Character	1Byte	Character
Counter 8bit	EIS14	DPT 5*	Value	0 ... 255	1Byte	8-bit unsigned value
Counter 8bit	EIS14	DPT 6*	Value signed	-128 ... 127	1Byte	8-bit signed value
String	EIS15	DPT 16*	String	max. 14 characters	14 Byte	Character string

EIB/KNX devices exchange fixed prescribed data formats with each other. These are defined in types. The old designations of the types are EIS (EIB Interworking Standard) The new designations are DPT (Data Point Type)